



**In Box with Cash Drawer** - Security Lock Keys (2)

**Lock Functions:**

1. LOCK OPEN (Straight up & down) - Normal operating status.
2. LOCK CLOSED (Turn Key right) - Cash drawer does not open.
3. MANUAL OPEN (Turn Key left) - Emergency drawer entry.

**Install Cash Drawer Coin Till:**

1. Open cash drawer by turning front drawer lock to the left.
2. Remove the hold-down tape from installed coin till.
3. Make sure that coin till is seated flat in the drawer.

**Trouble Shooting**

**Problem - "Cash Drawer Does Not Open":**

1. *Check* connections.
2. *Redo* Setup Procedures.

**Questions?:** Contact the Company by email: [jay@bletzinger.com](mailto:jay@bletzinger.com)

---

**Notices**

**Inspect Cash Drawer Within the 1<sup>st</sup> 24 Hours of Receipt** - Verify that there is no damage to the cash drawer or missing items listed under "In Box".

**If Cash Drawer Arrives Damaged**

1. Contact customer service by email: [jay@bletzinger.com](mailto:jay@bletzinger.com).
2. Do not remove any screws or attempt to repair cash drawer. Warranty & shipping insurance will be voided.

**In Case of Return** - Save Original Cash Drawer Carton - Product must be returned in the original cartons. The Company does not provide replacement shipping containers. Only merchandise returns with all original items received in original packaging will be accepted.

**Warranty extends to JAY® Brand Products** used under normal operating conditions for purpose intended. See "Terms & Conditions".