



In Box with Cash Drawer - Security Lock Keys (2)

Lock Functions:

1. LOCK OPEN (Straight up & down) - Normal operating status.
2. LOCK CLOSED (Turn Key right) - Cash drawer does not open.
3. MANUAL OPEN (Turn Key left) - Emergency drawer entry.

Install Cash Drawer Coin Till:

1. Open cash drawer by turning front drawer lock to the left.
2. Remove the hold-down tape from installed coin till.
3. Make sure that coin till is seated flat in the drawer.

Trouble Shooting

Problem - "Cash Drawer Does Not Open":

1. *Check* connections.
2. *Redo* Setup Procedures.

Questions?: Contact the Company by email: jay@bletzinger.com

Notices

Inspect Cash Drawer Within the 1st 24 Hours of Receipt - Verify that there is no damage to the cash drawer or missing items listed under "In Box".

If Cash Drawer Arrives Damaged

1. Contact customer service by email: jay@bletzinger.com.
2. Do not remove any screws or attempt to repair cash drawer. Warranty & shipping insurance will be voided.

In Case of Return - Save Original Cash Drawer Carton - Product must be returned in the original cartons. The Company does not provide replacement shipping containers. Only merchandise returns with all original items received in original packaging will be accepted.

Warranty extends to JAY® Brand Products used under normal operating conditions for purpose intended. See "Terms & Conditions".